

INVENTIA Telemetry & Localization Modules, Expanders & Converters

FEATURES	MODEL	MT-020 Telemetry Module	MT-021 Telemetry Module	MT-051 Telemetry Module	MT-100 Telemetry Module	MT-101 Telemetry Module	MT-101 3G Telemetry Module	MT-102 Telemetry Module	MT-151 LED Telemetry Module	MT-151 HMI Telemetry Module	MT-202 Telemetry Module	MT-251 Telemetry Module	MT-331 Telemetry Module	MT-512 Telemetry Module	MT-713 Telemetry Module	MT-723 Telemetry Module	MT-723 PT Telemetry Module	MT-UPS-1 Telemetry Module	ML-231 Localization Module	ML-931 Localization Module	EX-101 Expander	RM-120 Converter RS232/M-Bus
																						
I/O Resources																						
Binary inputs		0...4 ¹⁾	0...4 ¹⁾	5	8...16 ¹⁾	8...16 ¹⁾	0...8 ¹⁾	0...28 ¹⁾	0...28 ¹⁾	–	0...1 ¹⁾	0...8 ¹⁾	8	5	5	5	–	5	–	8...16 ¹⁾	–	
Binary outputs		2	4	–	0...8 ¹⁾	0...8 ¹⁾	0...8 ¹⁾	0...12 ¹⁾	0...12 ¹⁾	–	0...1 ¹⁾	0...4 ¹⁾	2	2	2	2	–	2	1	0...8 ¹⁾	–	
Counter inputs		0...4 ^{1,4)}	0...4 ^{1,4)}	5	8...16 ^{1,2)}	8...16 ^{1,2)}	0...8 ^{1,2)}	0...16 ¹⁾	0...16 ¹⁾	–	0...1 ¹⁾	0...6 ¹⁾	8	5 ³⁾	5 ³⁾	5 ³⁾	–	2 ^{1,2)}	–	8...16 ^{1,2)}	–	
Analog inputs		2	2	–	2	2	6	6	6	–	–	0...2 ¹⁾	–	3	3	3 ¹⁴⁾	–	2 ¹⁵⁾	–	2	–	
1-wire input		2	2	–	–	–	–	–	–	–	–	1	–	–	–	–	–	YES	–	–	–	
Real Time Clock (RTC)	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	–	–	
Ethernet Port	–	–	–	–	–	–	–	YES	YES	–	YES	–	–	–	–	–	–	–	–	–	–	
Serial port RS232/422/485	–	–	–	1(1/0/0/0)	2(2/1/1/0)	2(2/1/1/0)	2(2/1/1/0)	2(1/0/1/1)	2(1/0/1/1)	2(2/1/1/0)	2(1/0/1/0)	–	1	1(0/0/1/0)	–	–	–	1(0/0/0/1) ⁸⁾	1(0/0/0/1) ⁸⁾	2(2/1/1/0)	1 ¹²⁾	
Voice channel	–	–	–	–	–	–	–	–	–	–	–	YES	–	–	–	–	–	YES ⁸⁾	–	–	–	
Functionality																						
Local configuration via RS232/USB	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	–	YES	–	
Remote configuration over GPRS	YES	YES	YES ⁹⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES ⁹⁾	YES ⁹⁾	YES ⁹⁾	–	YES	YES ⁹⁾	–	
Unsolicited messaging	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	YES	–	
Data packet sending	YES	YES ¹⁰⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	YES	–	
SMS sending	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	–	–	
User programming (lines of code limit)	–	–	–	100	1024	1024	1024	5000	5000	1024	5000	–	–	–	–	–	–	–	–	1000	–	
Standard serial protocols	–	–	–	–	YES ⁵⁾	YES ⁵⁾	YES ⁵⁾	YES ⁵⁾	YES ⁵⁾	YES ⁵⁾	YES ⁵⁾	–	YES ⁸⁾	–	–	–	–	YES	YES ⁸⁾	YES ¹¹⁾	–	
Data packet routing	–	–	–	–	YES	YES	YES	YES	YES	YES	YES	–	–	–	–	–	–	–	–	–	–	
Manual alarm setting for analog inputs	–	–	–	–	YES	YES	YES	YES ⁷⁾	–	YES	–	–	–	–	–	–	–	–	–	–	YES	
Number of analog input alarm levels	4	4	4	4	6	6	4/6	4	4	–	4	4	–	4	4	4	–	4	–	6	–	
Remote read/write with SMS	YES	YES	YES ¹⁶⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES ¹⁶⁾	YES	YES ¹⁶⁾	YES ¹⁶⁾	–	YES	YES ¹⁶⁾	–		
Access control ⁶⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	YES	–	
Local mirroring of external resources	–	–	–	–	YES	YES	YES	YES	YES	YES	YES	–	–	–	–	–	–	–	–	–	–	
Datalogger	YES ¹⁸⁾	YES ¹⁸⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES ⁸⁾	YES	YES	YES	–	YES	YES	YES	–	
MT-DP compatibility (OPC, CSV, ODBC)	YES	YES ¹⁰⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	YES	–	
Remote firmware upgrade over GPRS	YES	YES ¹⁰⁾	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	–		
Other																						
Integral GSM/GPRS modem	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	–	YES	YES	–		
SIM cards	SIM/MIM	SIM	SIM/ μ SIM/MIM	SIM	SIM	SIM	SIM	2xSIM/MIM	2xSIM/MIM	SIM	2xSIM/MIM	SIM/MIM	SIM	SIM/MIM	SIM	SIM	–	SIM/MIM	SIM	–		
3G network support	YES ⁸⁾	–	–	–	YES ⁸⁾	YES	–	YES ⁸⁾	YES ⁸⁾	–	YES ⁸⁾	–	–	–	–	–	–	–	–	–		
Integral GPS receiver	–	–	–	–	–	–	–	–	–	–	–	–	–	YES ⁸⁾	YES ⁸⁾	YES ⁸⁾	–	YES	YES	–		
Integrated sensor T/H/P	P ⁸⁾	–	T	–	–	–	–	T	T	–	–	T ^{8)/H^{8)/P⁸⁾}}	–	T/H ⁸⁾	T	T/P	–	T	T	–		
DC power supply (V)/solar panel (PV)	9...30	9...30	–	9...30	10,8...36	10,8...36	10,8...36	10,8...36	10,8...36	10,8...36	18...55	9...30/PV	9...30	–	7...30	7...30	21,6...42/PV	9...30	2...5	10,8...36	21,6...42	
AC power supply (Vrms)	12...18	–	–	–	18...26,4	18...26,4	18...26,4	–	–	18...26,4	–	–	–	–	–	–	–	–	–	18...26,4	–	
Power supply for external sensors (V)	12/20	–	–	–	–	–	–	–	–	–	–	5...24	–	0...5/15 ^{8)/24⁸⁾}	0...5	0...5	–	–	–	–	–	
Power supply monitoring input	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	YES/–	–	YES/–	YES/YES	YES/YES	–	YES/–	YES/YES	YES/–		
Rechargeable battery int./ext.	ext.	–	–	–	–	–	–	ext.	ext.	–	ext.	int.	–	–	–	–	–	ext.	–	–		
Internal battery supply	–	–	3/6/9xR20	–	–	–																

- 1) number of binary inputs/outputs and counter inputs is configurable

4) $f_{\max} = 1\text{kHz}$

5) Modbus RTU Master/Slave, transparent mode, other...

6) password + internal list of a

and telephone numbers

7) for 2 inputs

8) option

9) requires MTSpooler

10) in new version since Q3 2012

1) if connected to MT-101/102/202

2) RS-232 to M-Bus converter

B) external battery pack required

4) one dedicated input for pressure measurement

15) voltage measurement, peak detector, differential measurement

measurement

16) module is not receiving SMS asleep

17) battery 1 year

3) device status recorder

0) or -20...+55°C - depending on the version of the internal battery